




CHRISTIE
TOTAL TORQUE SOLUTIONS

**HP227, HP232, HP252 & HP257
TWO SPEED HAND PUMP**

OPERATING INSTRUCTIONS

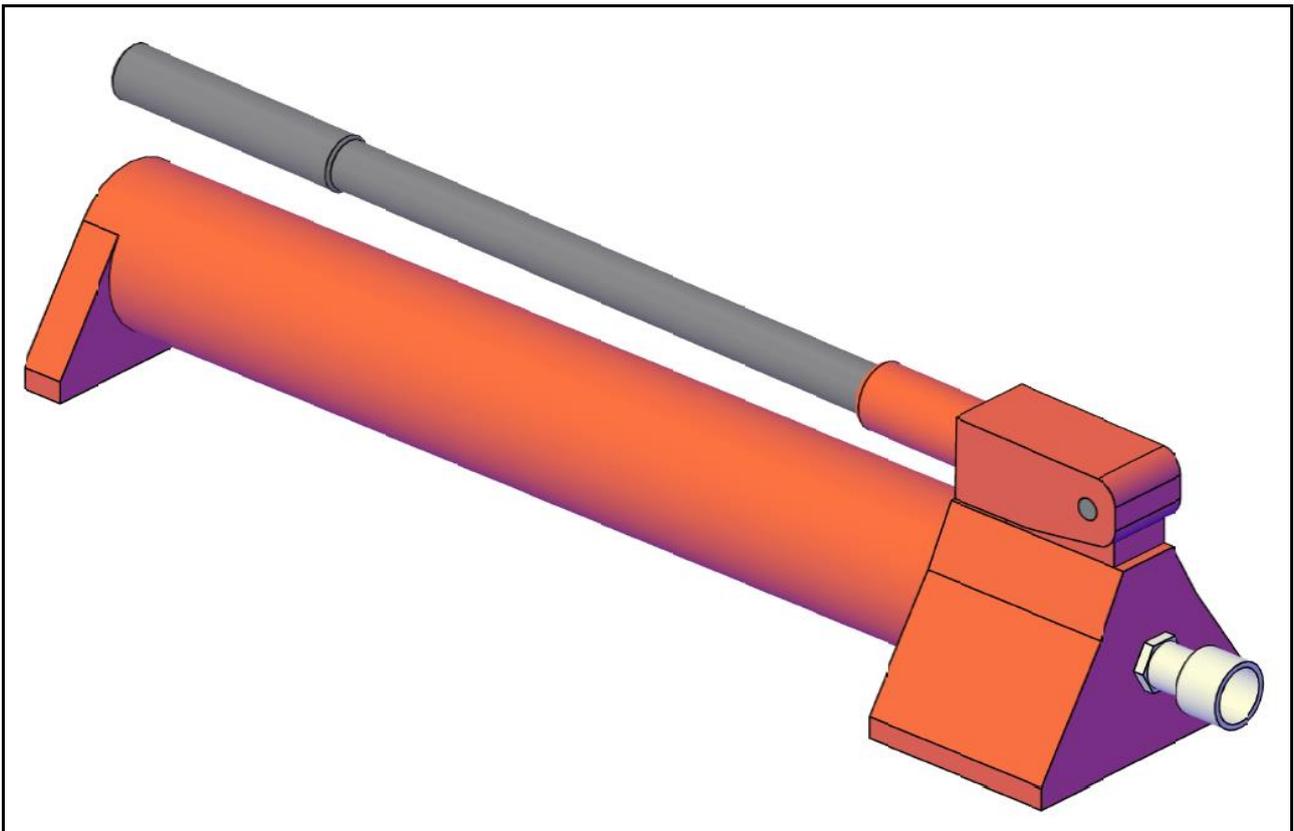

INTRODUCTION

The HP227, HP232, HP252 AND HP257 two speed hand pumps are manually operated hand pumps suitable for a wide range of applications. The pumps are supplied complete, with a pre-filled oil reservoir ready for immediate use. Both models feature low handle effort characteristics for easy operation and lightweight design and are of strong durable construction. All 4 pumps have a max working pressure of 700 bar. The HP227 and HP257 are of steel construction and the HP232 and HP252 are of aluminium construction.

SAFETY NOTES

All equipment used must be rated for the same operating pressure i.e 700 bar. (10,000 psi). **DO NOT** mix high and low pressure components. If in doubt contact W. Christie.

Sufficient time should be allocated to planning your hydraulic system. Make sure that all system components are adequate for the intended operation.

Ensure that the pump has sufficient oil capacity to operate the cylinder being used. **DO NOT** exceed the rated pressure of the pump or rated capacity of the cylinder.

Never tamper with the internal safety relief valve of the pump. Whenever possible use a pressure gauge in the system to prevent overloading.

These pumps must only be used on single acting cylinders

TEST, EXAMINATION AND SERVICE



- 1) Visually inspect all equipment before use for signs of damage or wear and tear. Any defective or suspect equipment should be repaired or replaced immediately.
- 2) All high-pressure hydraulic equipment should be thoroughly examined and proof tested by a competent engineer at least once a year - more frequently for heavy use.
- 3) Ask W. Christie about the Repair, Test and Examination Service - available for all makes of high-pressure hydraulic equipment.

HOSE CONNECTION

- 1) Hose connections are 3/8 NPT and must be properly tightened using a quality pipe thread sealant or 1-2 turns of P.T.F.E tape taking care NOT to allow loose ends of the tape to enter the hydraulic system. **DO NOT** over tighten connections - it can cause premature failure or rupture of fittings at below rated capacity.
- 2) Connect the male couplers on the hose ends to the female couplers on the cylinder. Ensure that both halves of the coupler are completely clean so that no dirt can enter the system. Fully tighten the two halves of the coupler **by hand only – do not use tools.**

TYPICAL SETUP AND OPERATION

- 1) The pump may be used either horizontally or vertically with the hose end downwards. The pump is equipped with a pressure relief valve factory set at the maximum operating pressure. Before use unscrew transit plug and replace with breather on the top of the tank. This will maximise the oil volume available.

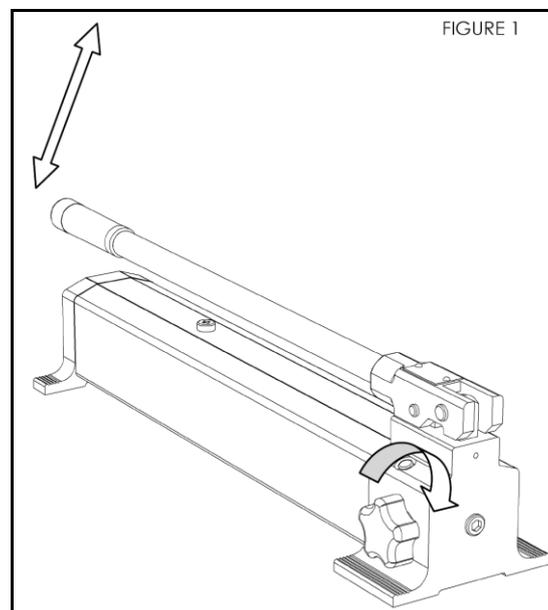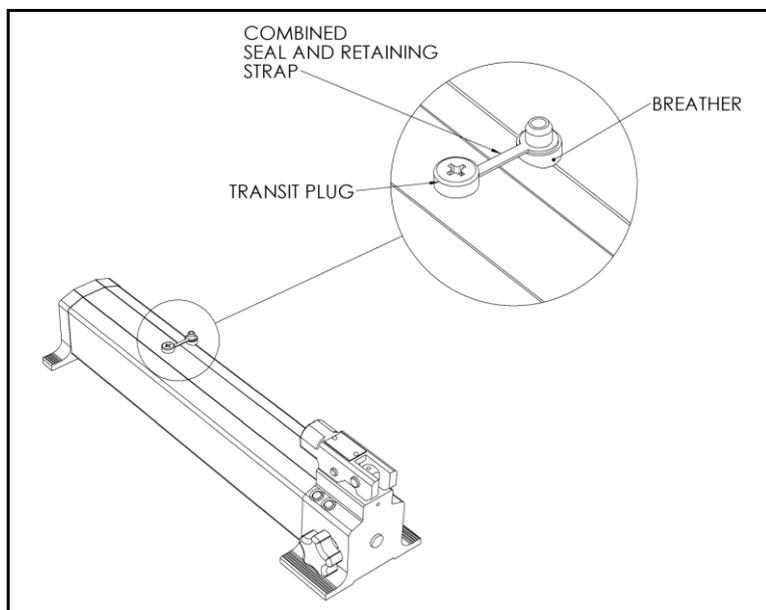


- 2) To advance the cylinder, turn the release knob clockwise. Operate pump handle. The pump will automatically switch from low pressure (high flow) operation to high pressure (low flow) as the pressure increases. See Figure 1. (HP232 used in diagrams).

- 3) **Note: The cylinder will automatically be held in the advance position and will not retract of its own accord.**

- 4) To retract the cylinder turn release knob anti-clockwise slowly, ensuring that the cylinder does not retract too fast as to make the operation unsafe. See Figure 2

- 5) If pump is to be transported after use, replace the transit plug in tank.

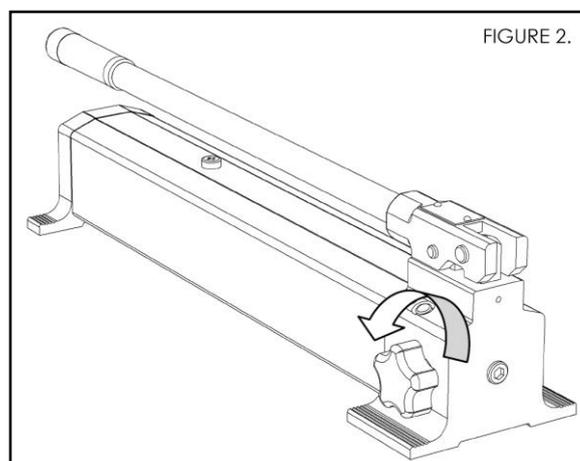

WARNING: DO NOT RELY ON THE PUMP VALVE FOR POSITIVE LOAD HOLDING. IF IT IS REQUIRED TO LOCK THE LOAD IN POSITION USE A MANUAL SHUT OFF VALVE IN THE CIRCUIT. NEVER WORK UNDER A LOAD SUPPORTED ONLY BY HYDRAULIC MEANS.

FILLING WITH OIL.

Ensure cylinder is full retracted.


HP227: Position pump vertically with pump head downwards. Remove central plug on rear of pump and check oil level using dipstick fitted to plug.

HP232/ HP257/ HP257: Position pump horizontal on a flat surface remove plug on the top of the tank and check oil level with dipstick on plug.

Use Genuine W. Christie hydraulic oil only.

BLEEDING THE HYDRAULIC SYSTEM

Connect a cylinder to the pump. Position the cylinder below the level of the pump with its pressure ports uppermost. Ensure the bleed screw on the pump is open. Operate the cylinder 3-4 times over its full stroke and all air should be forced back to the pump reservoir. **Warning:** when using a small cylinder with long hoses it is possible that air can remain trapped in the hose if the volume of the hose is greater than the volume of the cylinder. In this case the bleeding must be carried out using a shorter hose before use. See Figure 3.

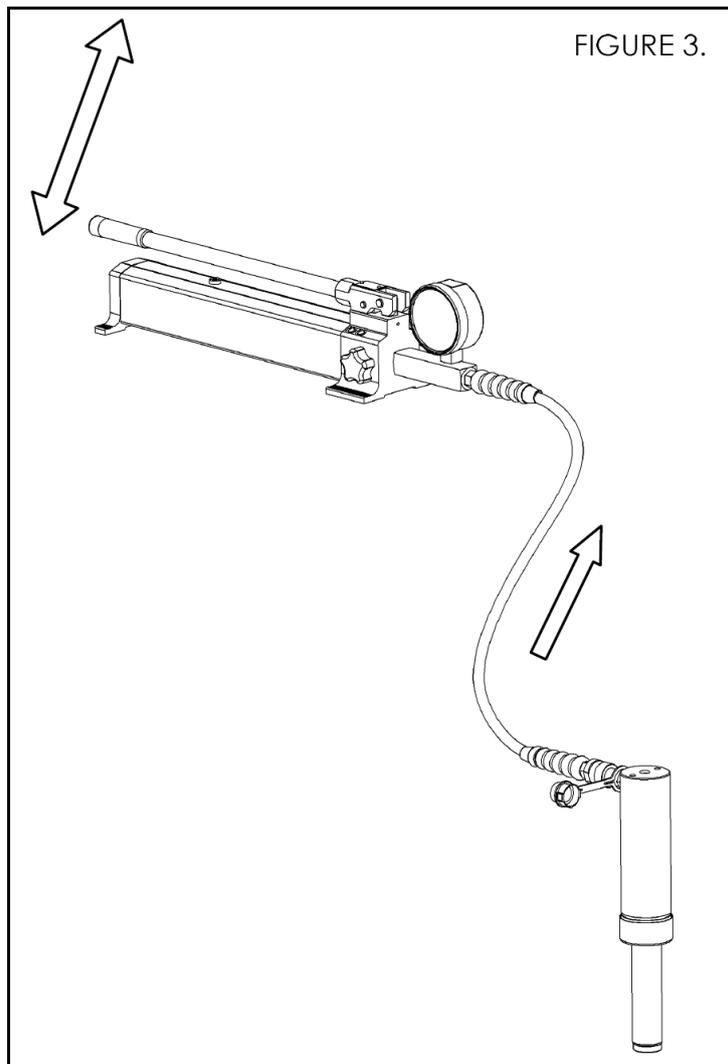



W. CHRISTIE (INDUSTRIAL) LTD
Christie House, Meadowbank Road,
Rotherham, South Yorkshire, S61 2NF
t: +44(0)1709 550088
e: info@wchristie.com
f: +44(0)1709 550030
w: www.wchristie.com



CHRISTIE
TOTAL TORQUE SOLUTIONS